



How to Replace Wax Guards

Remove tip (dome) earpiece.

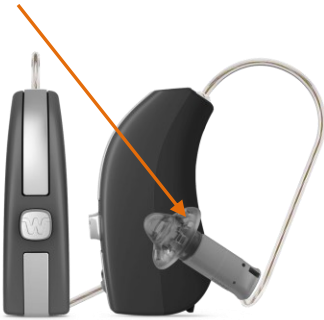

Open the package of wax guards

The CeruSTOP™ wax guard system consists of the following parts:

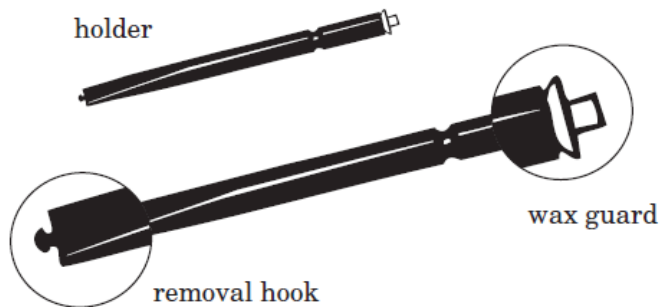

A white wax guard is mounted on one end of the holder. At the other end is a hook for removing the used wax guard.

1. Remove one stick from the package.
2. Push the removal hook gently and straight into the old wax guard until you feel a click. Pull gently. The old wax guard will come out on the stick.
3. Turn the stick over end for end so that the new wax guard is lined up with the hole (gray loudspeaker) where the old one was removed.
4. Push the new wax guard into the hole (receiver).
5. Replace wax guards once a month or as needed.