


How to replace Wax Guards



Open the package of wax guards

Pull one of the single use sticks out of the package.

The CeruSTOP™ wax guard system consists of the following parts:

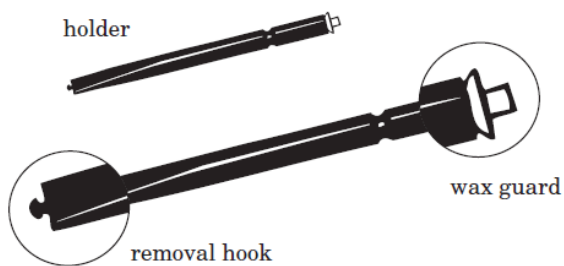

A white wax guard is mounted on one end of the holder. At the other end is a hook for removing the used wax guard.

Take out old wax guard



1. Push the removal hook gently and straight into the old wax guard until you feel a click. Pull gently. The old wax guard will come out on the stick.
2. Turn the stick over end for end so that the new wax guard is lined up with the hole (gray loudspeaker) where the old one was removed.
3. Push the new wax guard into the hole (receiver).
4. Replace wax guards once a month or as needed.